



# Helpful Hints 0001

*clear & easy*

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430  
Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1

DATE: 8-2-01

REVISION: 02

**SUBJECT:** Flavor Card Removal from the Select Button

# of People  
Required



**MODELS:** Gill Marketing Venders

**TOOLS REQUIRED**

None

**ESTIMATED TIME**


30 Seconds

### Reason for Hint:

To show the correct way to remove a flavor card from the select button of a marketing vender.

### Instructions:

1. Remove power from vender by unplugging vender's main power cord from the AC voltage power source.
2. Place your fingers between the flavor card tabs that hold the flavor card in place.
3. Push down on the flavor card with your fingers to dislodge it from the flavor card tabs, then carefully pull inward to remove.

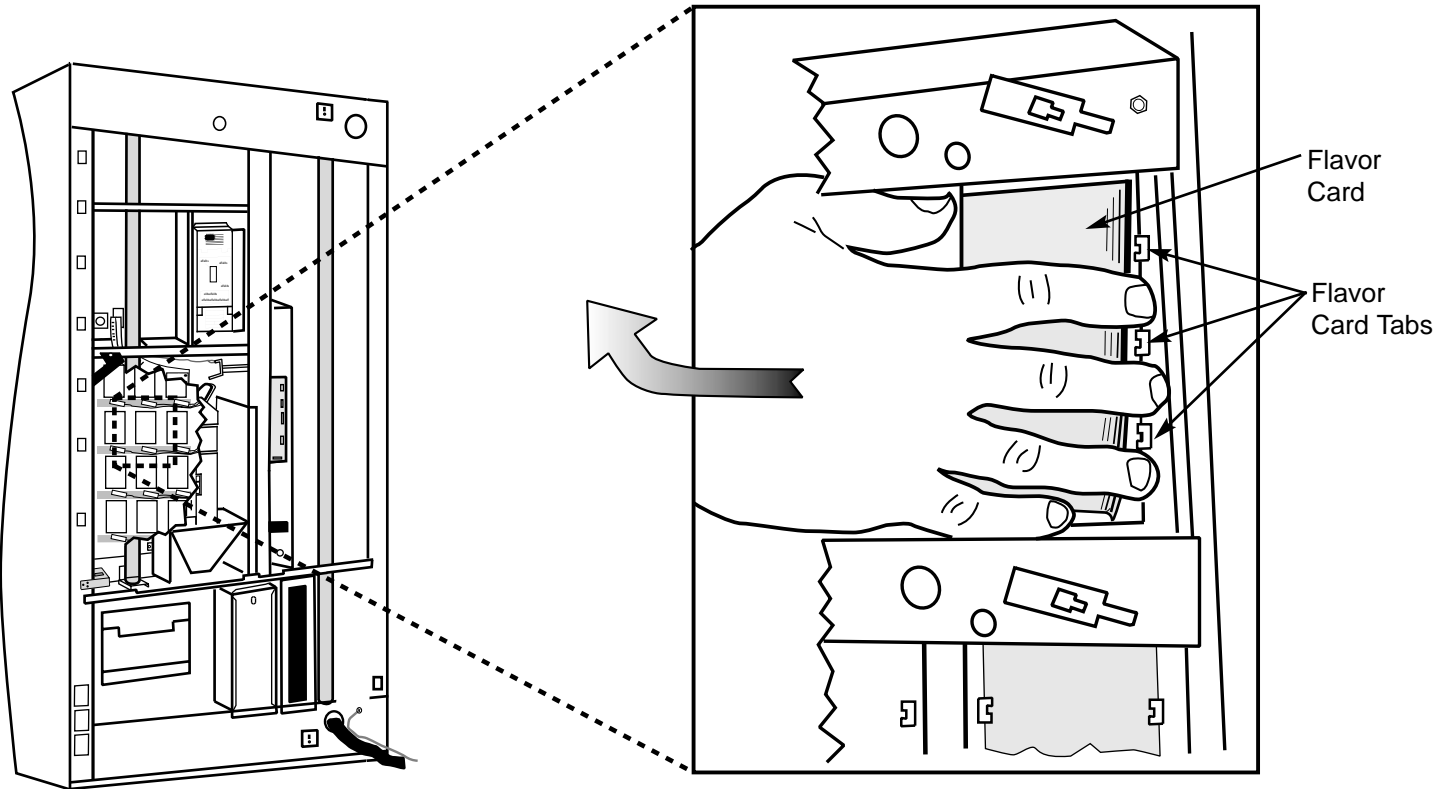

Rear View of the Marketing Vender's Door

**ANY QUESTIONS???** CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
CALL TOLL FREE (800) 931-9214