



SERVICE BULLETIN # 00011

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430

Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1

DATE: 6-18-02

REVISION: 05

SUBJECT: Setting Vender for Free Vend

MODELS: Electro-Mechanical

of People
Required



KIT NUMBER

KIT DESCRIPTION

TOOLS REQUIRED: Scribe

ESTIMATED TIME: 3 minutes




The following areas of this vender contain voltage, which can cause serious injury or even death. The main power cord, supplying 110 VAC to the evaporator, EMI filter, and refrigeration system. The power line from the EMI filter to the ballast and transformer. The ballast can produce upwards of 600 volts. Remove power from vender before working in any of these areas.

BEFORE WORKING ON VENDER: Remove power from vender by unplugging vender's main power cord from the AC voltage power source.

Instructions:

To set an Electro-Mechanical Vender for free vend, remove the wire in the "Normally Open" (NO) of SW 2 and put it in the "Normally Closed" (NC) of SW3 (see diagram below).

Note: Relay socket as seen from the bottom.

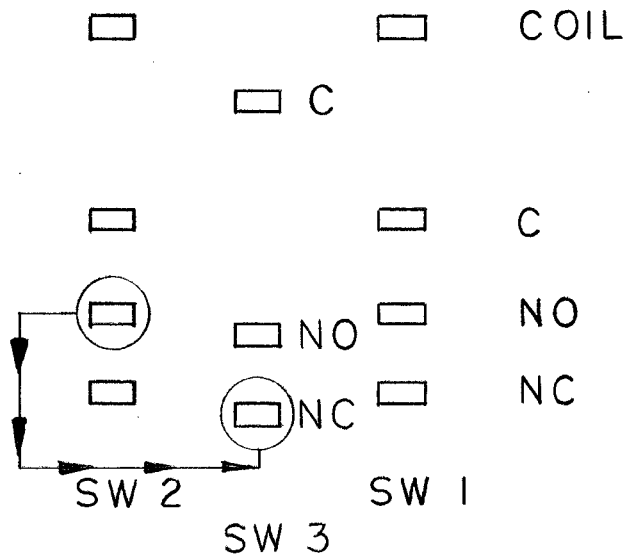

Relay Socket

**ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
CALL TOLL FREE (800) 931-9214**