



Helpful Hints 0035

clear & easy

426 INDUSTRIAL BOULEVARD • KEARNEYSVILLE WV 25430-2776 • USA
Phone: +1 304 728-7056 • Fax: +1 304 725-6579 • Toll Free: 800 931-9214

PAGE: 1 of 1

DATE: 11-15-05

REVISION: 00

SUBJECT: Chute Sensor Adjustment on International KO Control Board

of People
Required



MODELS: GIII with 836152 KO Control Board (non-USA [including Puerto Rico] and Canada)


TOOLS REQUIRED: Flat screwdriver

ESTIMATED TIME: <15 minutes

REASON FOR HINT: This Helpful Hint describes how to properly adjust the chute sensor on the 836152 KO Control Board and to eliminate chute sensors with insufficient adjustability. (**Note:** This control board is NOT used in the USA [including Puerto Rico] and Canada.)

INSTRUCTIONS:


1. Turn the adjustment screw clockwise until the LED is lit, then turn counterclockwise until the LED goes out. Continue to turn counterclockwise four full turns.
2. Make 10 test vends from a fully-loaded column column #12. If the vender has no further issues, the setup is good.
Note: If a "dry vend" issue occurs, replace the chute sensor (complete wiring, two parts).
3. If double-vending occurs during testing, turn the adjustment screw one turn clockwise.

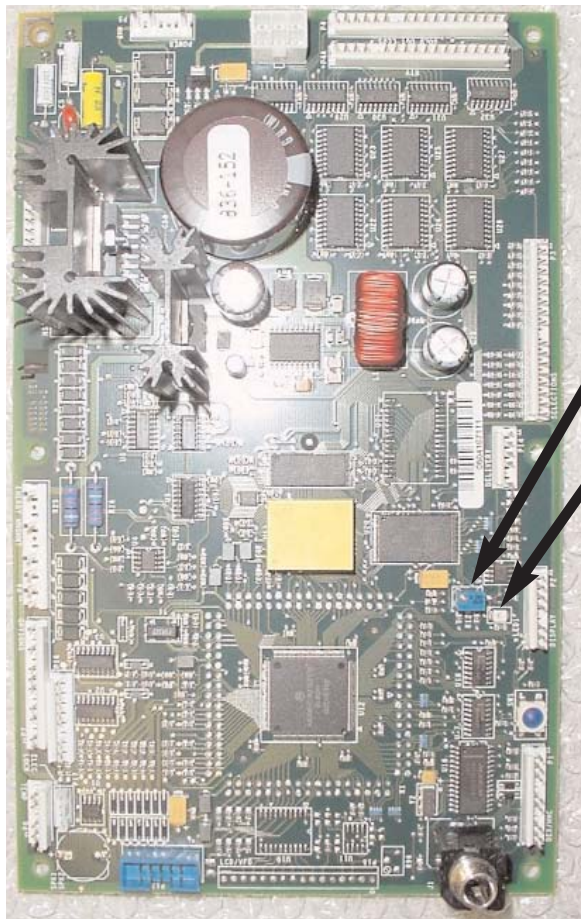

Chute sensor adjustment screw (Q1)

LED indicator light

Test vend column 12

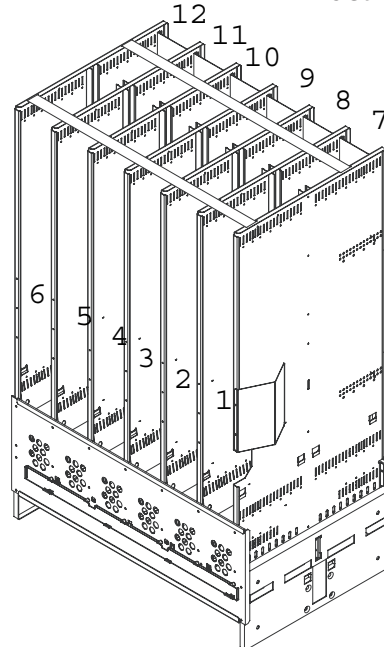

ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
CALL TOLL FREE (800) 931-9214