

CUSTOM SPACE TO SALES – GIII KO

1. Push mode button on the vender's control board.
2. Push #2 selection until "PASS," input the pass code (4231), then press #4 to enter.
3. Push #2 selection until "StS," then push #4 selection to enter.
4. Push #2 selection until "CStS," then push #4 selection.
5. Push #2 selection until "CLr," then push #4 selection.
6. Push #1 selection. You will see "SAVE." Push #4. The LED will display "StS."
7. Push #4 to enter back into "StS," then scroll to "CStS" with #2 selection.
8. Enter into "CStS" with #4 selection, and push #2 selection until you see "SL1" and a blank screen. ("SL 1" is selection 1; the blank screen means no columns assigned.)
9. Enter into the selection you wish to assign with #4. You will see "C1" (column 1).
10. Scroll through the columns with the #2 selection.
11. Push the #4 selection at the column you wish to assign.
12. You will now see a 0 start to flash. (0 = unassigned, 1 = assigned)
13. Change the 0 to a 1 by pushing the #2 selection.
14. After changing the 0 to a 1, hit the #4 selection to lock it in.
15. Once you have assigned the column to the selection, exit out with #1.
16. You will see the selection, followed by the columns that are assigned to it.
17. Scroll through all the selections and assign columns to selections.
18. Once you are done, hit the #1 selection. You will see "SAVE."
19. Press the #4 selection to SAVE your work.