

## SETTING PRICE – MERLIN IV

1. Push the mode button on the control board.
2. Push #1 selection until "PASS," hit the #3 selection, then input pass code (4231).  
**Note:** *Revision 67100-6 and higher will not include PASS.*
3. Push the #1 selection until "PRIC," then hit the #3 selection to enter.
4. You will see "P 1." This stands for price 1. Prices are set by selection number.
5. Push the #1 selection to scroll through selections 1 through 12 or "ALL."
6. Entering into "ALL" will change the prices of all selections at once.
7. When entering into a single selection or "ALL," you can raise the price by pushing the #1 selection, or lower it by pushing the #2 selection.
8. Once you have set the prices, exit out by holding the #3 selection.