




# 127

## Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776  
 Phone: (304) 728-7056 • Fax: (304) 725-6579

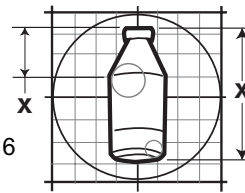

<b>PAGE:</b> 1 of 2
<b>DATE:</b> 6-22-06
<b>REVISION:</b> 00


**PRODUCT NAME:** 10 oz Minute Maid bottle  
**BOTTLER / COMPANY:** The Coca-Cola Company  
**VOLUME:** 10 oz. / 295 mL  
**PACKAGE TYPE:** PET  
**HEIGHT:** 5.82 in. / 147.8 mm  
**DIAMETER:** 2.52 in. / 64.1 mm  
**WEIGHT:** 0.75 lbs. / 0.34 kg  
**COUNTRY OF ORIGIN:** USA



APPROVED VENDERS				
VENDER	RETAINERS		79" CAPACITY	
	Front	Rear	Front	Rear
GIII	12	9	32	32
TDV	15	21	32	66
RVV	6	N/A	8	N/A
RVV NG	N/A	N/A	8	N/A

**KITS / PARTS:** **GIII:** *FRONT COLUMN:* 10 oz Minute Maid Kit GIII Front (79": 231057; 72": 232057). *REAR COLUMN:* 10 oz Minute Maid Kit GIII Rear (79": 231058; 72": 232058). **TDV:** *FRONT COLUMN:* 10 oz Minute Maid Kit TDV Front (296057). *REAR COLUMN:* None required.  
**RVV and RVV NG:** None required.

**SPECIAL INSTRUCTIONS:** **GIII:** See page 2. **TDV:** See page 2.  
**RVV:** Set adjustments to position 6. **RVV NG:** No special instructions.

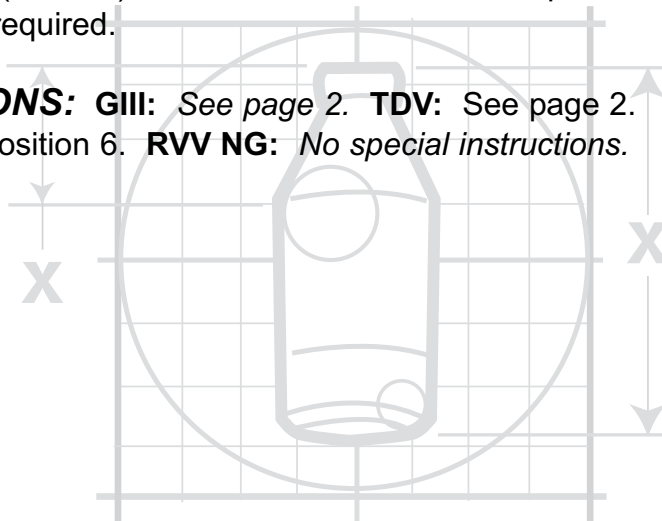


**ANY QUESTIONS???** CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
**CALL TOLL FREE (800) 931-9214**



# 127

## Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776  
Phone: (304) 728-7056 • Fax: (304) 725-6579

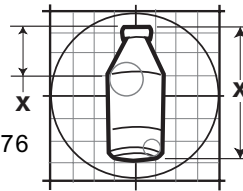

PAGE: 2 of 2

DATE: 6-22-06

REVISION: 00

PRODUCT NAME: 10 oz Minute Maid bottle

### GIII KIT INSTALLATION INSTRUCTIONS:


1. Remove power from the vender by unplugging the vender's main power cord from the AC voltage source (outlet).
2. FRONT COLUMNS: Install one black extrusion on each front retainer. (See Figure 1.) Set product retainers in position 12.
3. REAR COLUMNS: Install one divider extrusion on each center channel. (See Figure 2.) Set back spacers in position 9.
4. Set all product stops in small package position.
5. Load bottles with caps to the front in front columns and caps to the rear in rear columns.

### TDV FRONT COLUMN KIT INSTALLATION INSTRUCTIONS:

1. Remove power from the vender by unplugging the vender's main power cord from the AC voltage source (outlet).
2. Install one black extrusion on each front retainer. (See Figure 1.) Set product retainers in position 15.
3. Install bottles with caps to the front in front columns and all caps to the rear in rear columns.

**Figure 1**


Black extrusion

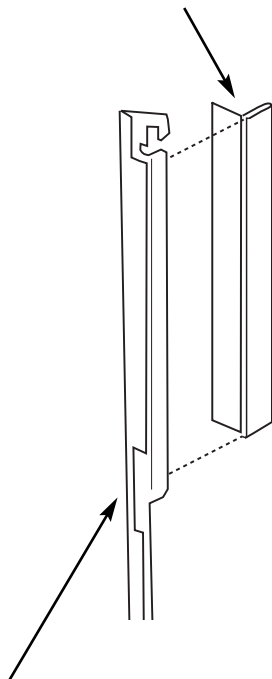

Front-column retainer

**Figure 2**

Installation of divider extrusions in GIII rear column

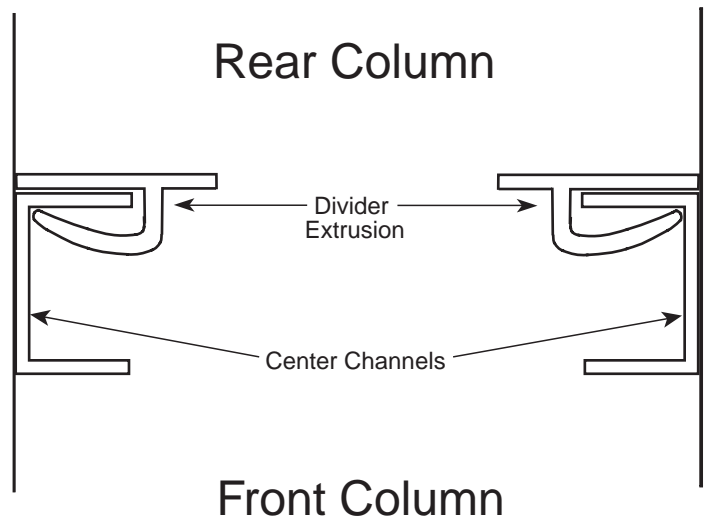

Rear Column

Front Column

**ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
CALL TOLL FREE (800) 931-9214**