



SERVICE BULLETIN # 00165

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430

Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1

DATE: 8-21-00

REVISION: 01

SUBJECT: Installation of Anti-Bridging Plate Assembly for specified areas and packages

MODELS: GIII

KIT NUMBER

KIT DESCRIPTION

281120

FRONT - Anti-Bridging Plate Assembly* (see area/packages listing below)

281130

REAR - Anti-Bridging Plate Assembly* (see area/packages listing below)

Areas and Packages

U.K. (PET BOTTLES 355 ml)

1. Coke - 2.68 inch diameter
2. Sprite - 2.66 inch diameter
3. Dr Pepper - 2.68 inch diameter
4. Lilt - 2.63 inch diameter
5. Fanta - 2.64 inch diameter

CANADA (GLASS BOTTLES 355 ml)

1. Coke - 2.52 inch diameter
2. Sprite - 2.54 inch diameter
3. Barq's - 2.52 inch diameter


BEFORE WORKING ON VENDER: Remove power from vender by unplugging vender's main power cord from the AC voltage power source (wall outlet).

Instructions:

1. Unload column to be retrofitted.
2. Peel the backing from the 2 pieces of the "two-sided" tape (on the rear of the "Anti-Bridging Plate").
3. Place the "Anti-Bridging Plate" on the column wall against the center channel (divider between the front and rear columns). Make sure that the edge of the "Anti-Bridging Plate" with 1/2" of metal exposed is aligned against the center channel as shown in figure 1. Locate the bottom edge of the "Anti-Bridging Plate" just beneath the top edge of the adjustable product stop as shown in figure 2.

NOTES:

1. There is only one "Anti-Bridging Plate" per kit and it is to be installed on the right column wall with the foam tape at the bottom.
2. Make sure that the column wall is dry and clean before applying the anti-bridging plate.

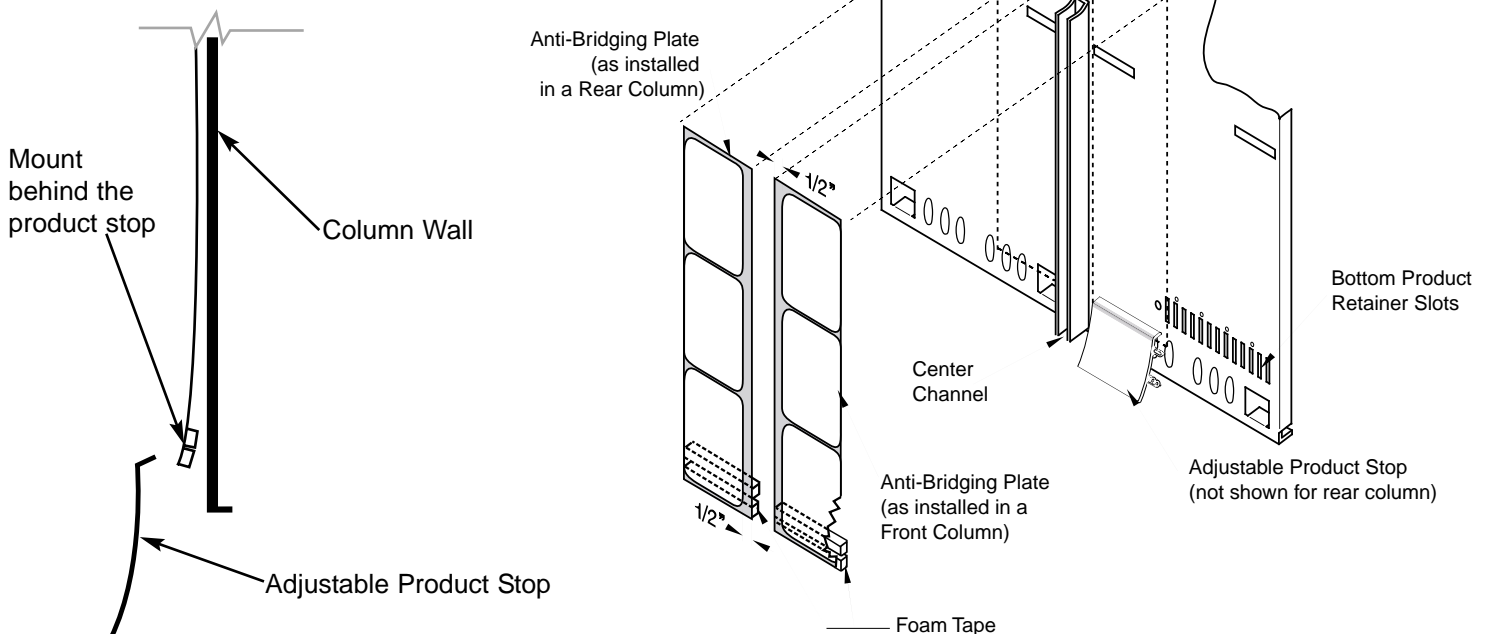

**ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
CALL TOLL FREE (800) 931-9214**