



# Helpful Hints 0004

clear & easy

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430  
Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1  
DATE: 8-2-01  
REVISION: 01

**SUBJECT:** Painted Lock-Cover Hole Blocks

# of People  
Required



**MODELS:** GIII Marketing Venders

**KIT NUMBER**

**KIT DESCRIPTION**

290,044,004

Painted Lock-Cover Hole Block Kit


**TOOLS REQUIRED:** Phillips screwdriver, 7/16" deep well socket

**ESTIMATED TIME:** 5 minutes

**REASON FOR HINT:** To cover the lock-cover openings when the lock-cover hole blocks have been removed.

**INSTRUCTIONS:**

1. Remove both screws that hold the T-handle brace, then remove the T-handle brace.
2. Remove both nuts that hold the T-handle housing, then remove the T-handle housing.
3. Install both lock-cover hole blocks (from the kit).
4. Reapply the T-handle housing.
5. Tighten both nuts after both painted lock-cover hole blocks have been inserted.
6. Reapply the T-handle brace.

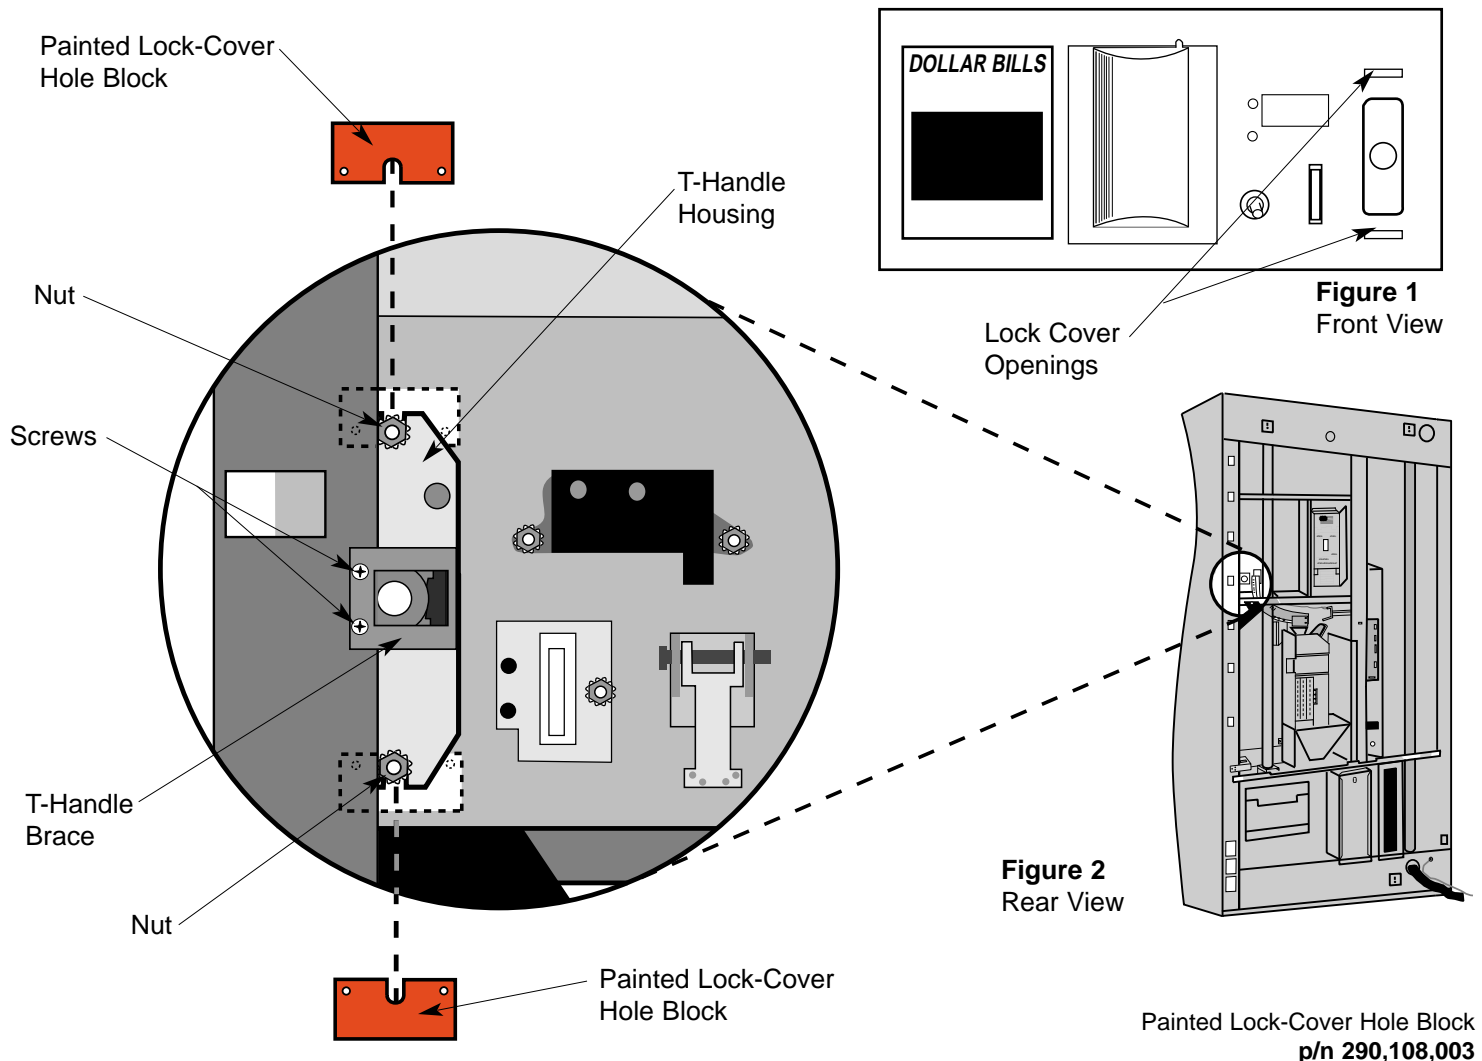

**ANY QUESTIONS???** CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
CALL TOLL FREE (800) 931-9214