




# 065

## Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776  
Phone: (304) 728-7056 • Fax: (304) 725-6579

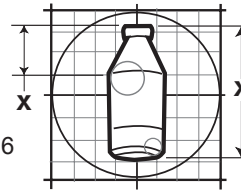

PAGE: 1 of 2
DATE: 2-18-04
REVISION: 02

**PRODUCT NAME:** 12 oz. Kemps  
**BOTTLER / COMPANY:** Marigold Foods, Inc.  
**VOLUME:** 12 oz. / 354 mL  
**PACKAGE TYPE:** Plastic  
**HEIGHT:** 5.75 in. / 14.6 cm  
**DIAMETER:** 2.6 in. / 6.6 cm  
**WEIGHT:** 0.86 lbs. / 0.39 kg  
**COUNTRY OF ORIGIN:** USA



APPROVED VENDERS				
VENDER	RETAINERS		72" CAPACITY	
	Front	Rear	Front	Rear
Milk Vender	L8/R12	9	26	26

**Kits / Parts:** 332125 Kemps Front Column Vend Kit (one per front column); 332126 Kemps Rear Column Vend Kit (one per rear column); 827004 Anti-friction Sheet Silicone

### Installation Instructions:

1. Remove power from the vender by unplugging the vender's main power cord from the AC voltage source (outlet).
2. Remove all product from the columns to be converted.
3. Remove the rubber strip on the top left-side column wall which is used to secure product retainers.
4. Attach a bottle filler to the product baffle. (See Figure 2.)
5. **FRONT COLUMNS:** Remove the product retainers and the plastic baffle from the column. Install the filler plate by placing it all the way against the center divider channel, so that the filler plate's top tab slides into position 9 and the bottom tab slides securely into the square hole in the baffle nearest the divider. (See Figure 1.) Install an anti-friction sheet so that the top of the sheet is at the laser line on the filler plate, with the bottom portion of the sheet on the baffle. Apply a thin coat of silicone to the anti-friction sheet after it is installed. Attach one of the black extrusions from the kit to the left product retainer. (See Figure 3.) Install the left retainer in position 8 and the right product retainer in position 12.  
**REAR COLUMNS:** Move the back spacer assembly all the way to the rear, and remove the plastic baffle from the column. Install the filler plate by placing the top tab in the position closest to the divider channel. Install an anti-friction sheet so that the top of the sheet is at the laser line on the filler plate, with the bottom portion of the sheet on the baffle. (See Figure 4.) Apply a thin coat of silicone to the anti-friction sheet after it is installed. Place the back spacer assembly in position 9.
6. Load bottles with caps to the front in front columns and caps to the rear in rear columns.
7. Restore power to the vender by plugging the vender's main power cord into the AC voltage source


**ANY QUESTIONS???** CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
**CALL TOLL FREE (800) 931-9214**



# 065

# Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776  
 Phone: (304) 728-7056 • Fax: (304) 725-6579

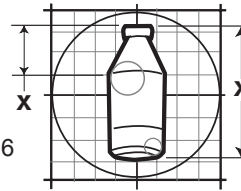

PAGE: 2 of 2


DATE: 2-18-04

REVISION: 02

PRODUCT NAME: 12 oz. Kemps


**Figure 1**

Left-side column wall

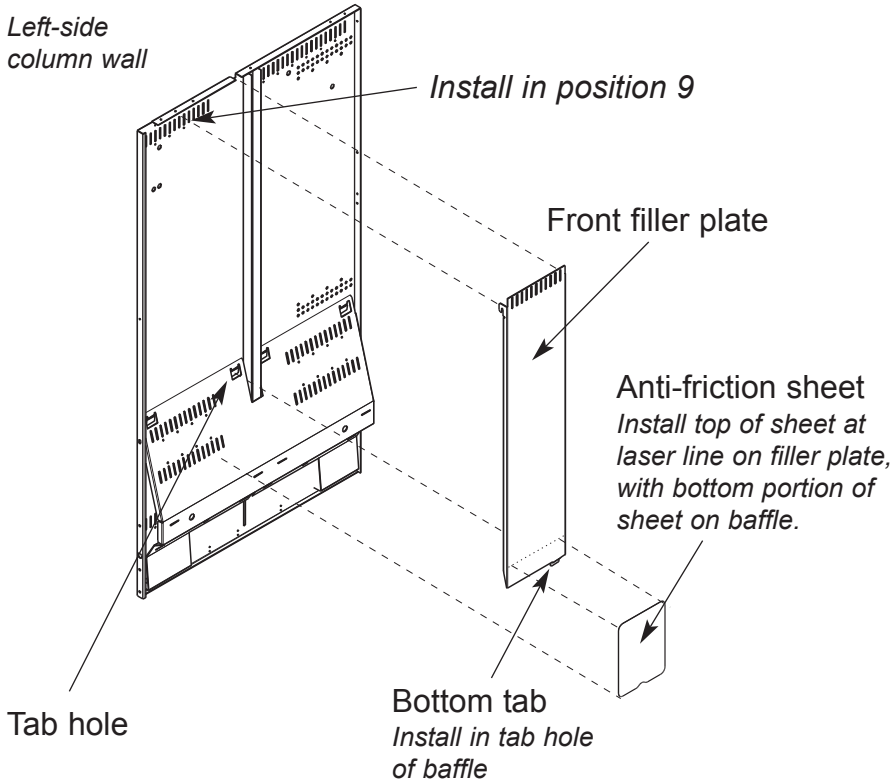


**Figure 2**

Attaching the bottle filler to the product baffle

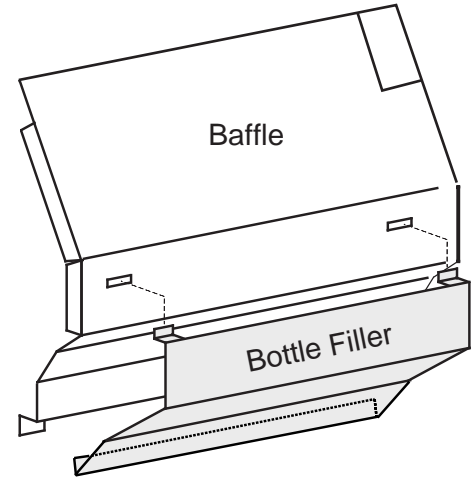


**Figure 3**

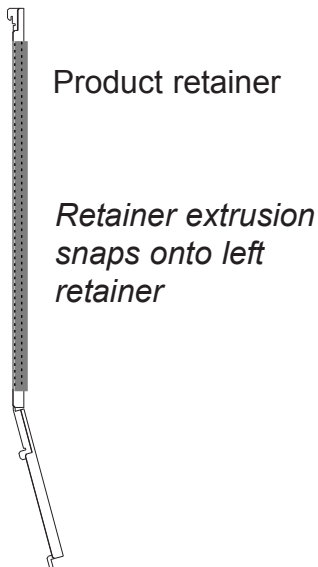

**Figure 4**

Right-side column wall

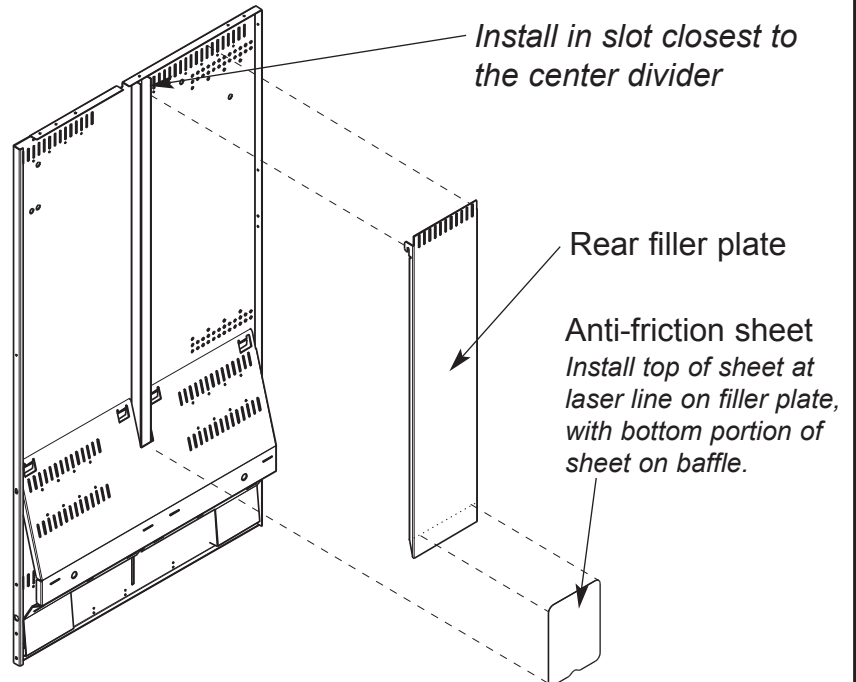

**ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT  
 CALL TOLL FREE (800) 931-9214**