



Helpful Hints 0020

clear & easy

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430
Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1
DATE: 8-2-01
REVISION: 01

SUBJECT: 20 oz. Dr Pepper Bottle

MODELS: GIII

TOOLS REQUIRED

None

ESTIMATED TIME

2 minutes (with no product loaded in columns)

REASON FOR HINT:

Settings to vend the 20 oz. Dr Pepper Bottle released in 2000.



INSTRUCTIONS:

1. Remove power from vender by unplugging vender's main power cord from the AC voltage power source.
2. If vender is retrofitted with the Proprietary Dr Pepper extrusions, **remove extrusions** because they are not necessary and will cause vending problems with the 20 oz. Dr Pepper Bottle.
3. Place the Front Retainers in position #8 if vending from the front column and set the Rear Spacer to position #3 if vending from the rear. **Extrusions are not necessary.**
4. Test vend.

NOTES:

1. For improved reliability, packages should be loaded and "packed" such that they are approximately horizontal.
2. Load bottles with "caps out" as illustrated.

Remove the Proprietary Dr Pepper Extrusions (if present)

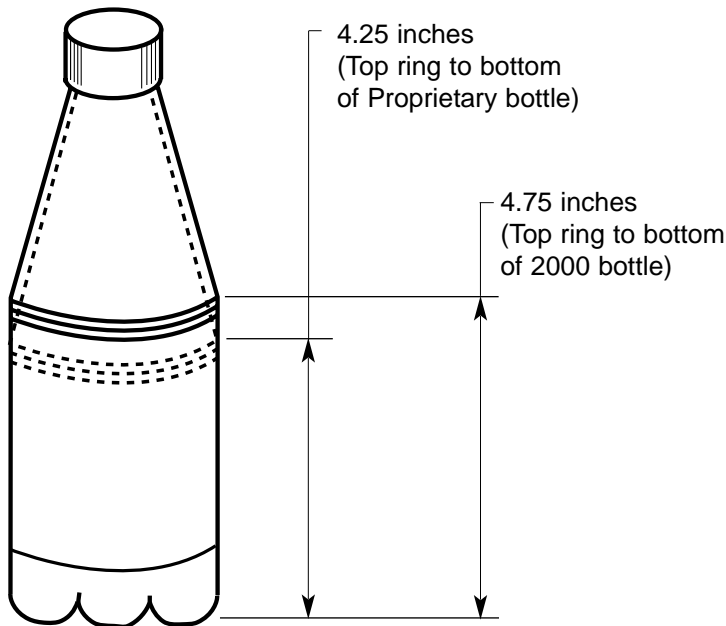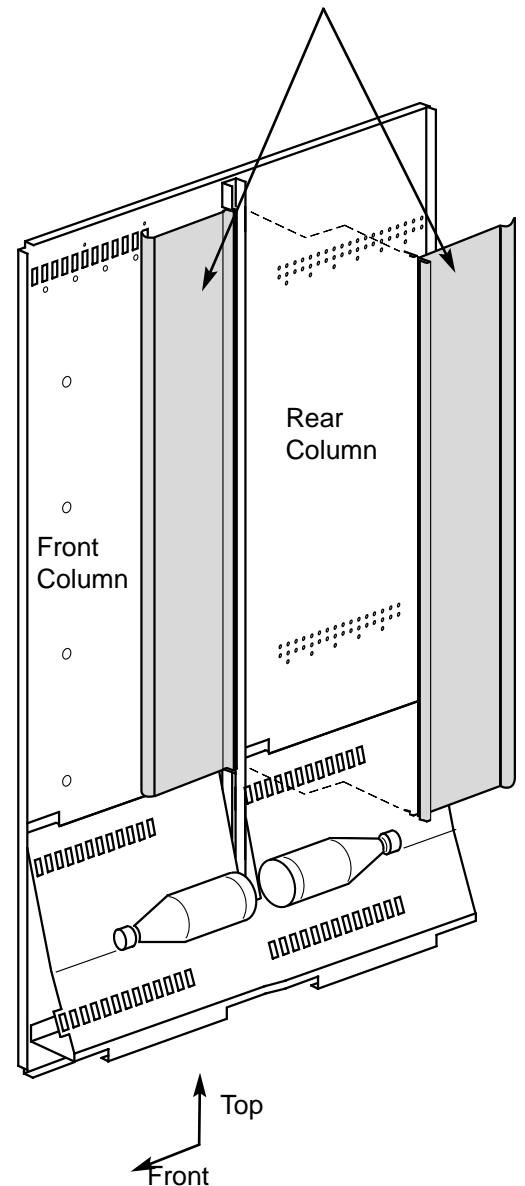

Note: Dotted line represents proprietary bottle

ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
CALL TOLL FREE (800) 931-9214