



Helpful Hints 0003

clear & easy

201 INDUSTRIAL BOULEVARD • KEARNEYSVILLE, WV 25430
Phone: (304) 728-7056 • Fax: (304) 725-6579 • Toll Free: (800) 931-9214

PAGE: 1 of 1

DATE: 6-18-02

REVISION: 03

SUBJECT: Fluorescent Bulb Removal

MODELS: GIII CDC Landscape Venders

of People
Required



TOOLS REQUIRED: None

ESTIMATED TIME: 3 minutes


REASON FOR HINT: To show the proper way to remove a fluorescent bulb from a GIII CDC Vender.

INSTRUCTIONS:

Caution: The fluorescent bulb may be hot, it is recommended to let it cool by cutting off power to the ballast before removing the bulb.

1. Unplug vender or ballast.

2. Push up on bulb to release it from the bottom lamp socket. This will allow you to reposition the bottom of the bulb so that it drops below the bottom-lamp bracket to the door-frame base.
3. After the bottom of the bulb touches the door-frame base, position the top of the bulb so that it clears the top-door panel; carefully remove the bulb from the top area of the door frame.

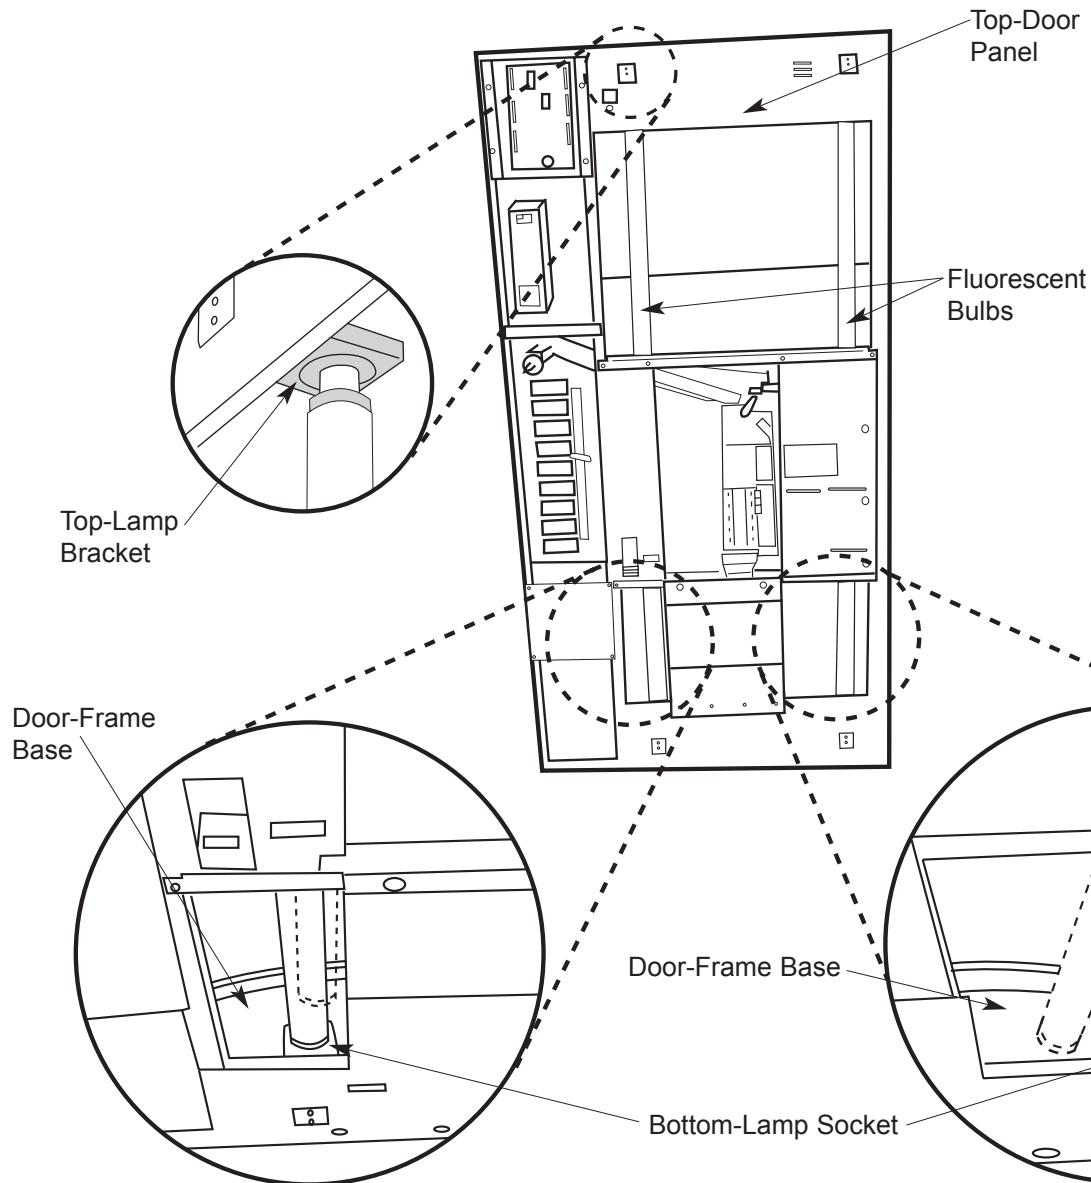

The following areas of this vender contain voltage, which can cause serious injury or even death. The main power cord, supplying 110 VAC to the evaporator, EMI filter, and refrigeration system. The power line from the EMI filter to the ballast and transformer. The ballast can produce upwards of 600 volts. Remove power from vender before working in any of these areas.

ANY QUESTIONS??? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
CALL TOLL FREE (800) 931-9214