




159 Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776 • USA
Telephone: +1 304 728 7056 • technicalinquiry@royalvendors.com
Toll-free in North America: 1 800 931 9214 • Fax: +1 304 725 4016
Canada: +1 905 738 5777 • Mexico: +52 55 5203 6887
Europe: +49 2158 95 1000 • Australia: +61 2 9890 5433

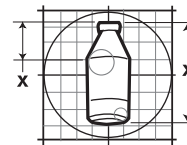

PRODUCT NAME: Chaudfontaine (2009)
BOTTLER / COMPANY: The Coca-Cola Company
VOLUME: 500 mL
PACKAGE TYPE: PET
HEIGHT: 216.5 mm
DIAMETER: 64.6 mm
WEIGHT: 0.52 kg
COUNTRY OF ORIGIN: Belgium

APPROVED VENDERS

VENDER	RETAINERS		79" CAPACITY	
	Front	Rear	Front	Rear
GIII+ *	6	3	34	34

* - Serial numbers beginning with 1494 and higher.

KITS / PARTS: GIII: FRONT COLUMNS: Chaudfontaine Bottle Vend Kit, GIII, Front (79": 210118; 72": 211263). REAR COLUMNS: Chaudfontaine Bottle Vend Kit, GIII, Rear (79": 210119; 72": 211264).



INSTALLATION INSTRUCTIONS

Note: Before working on vender, always remove power by unplugging the vender's main power cord from the AC voltage source (outlet).

FRONT COLUMNS:

1. Install the column filler, as shown in Figure 1.
2. Attach one divider extrusion to each side of the center channel. (See Figure 2.)
3. Attach one retainer extrusion to each product retainer. (See Figure 3.) Install the retainers in position 6.
4. Remove the product stop adjustment rod for the column to be converted. Then, reinstall the product rod so that the clip-on product stop (from the kit) is attached to it, with the top portion of the clip-on product stop resting on the 1.85" (47 mm) spacer in the column. (See Figure 4.)
5. Place the adjustable product stops in the small-package position.
6. Load bottles with caps to the front.

REAR COLUMNS:


1. Install the bottom column filler. Then, install the top column filler. (See Figure 1.)
2. Attach one divider extrusion to each side of the center channel. (See Figure 2.)
3. Place the backspacer in position 3.
4. Remove the product stop adjustment rod for the column to be converted. Then, reinstall the product rod so that the clip-on product stop (from the kit) is attached to it, with the top portion of the clip-on product stop resting on the 1.85" (47 mm) spacer in the column. (See Figure 4.)
5. Place the adjustable product stops in the small-package position.
6. Load bottles with caps to the rear.

**ANY QUESTIONS? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
IN NORTH AMERICA, CALL TOLL FREE 1 800 931 9214**



159 Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776 • USA
Telephone: +1 304 728 7056 • technicalinquiry@royalvendors.com
Toll-free in North America: 1 800 931 9214 • Fax: +1 304 725 4016
Canada: +1 905 738 5777 • Mexico: +52 55 5203 6887
Europe: +49 2158 95 1000 • Australia: +61 2 9890 5433

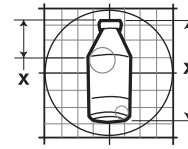

Page: 2 of 4


Date: 8 May 09

Revision: 00

PRODUCT NAME: Chaudfontaine (2009)


Figure 1.

Rear column fillers
Install the bottom rear column filler first. Then, install the top rear column filler, so that it overlaps the bottom filler. When properly installed, the rear column fillers together will appear as shown below.




Top rear column filler

Bottom rear column filler





Ensure the tab at the top of the column filler is inserted in the first slot, counting from the center channel.

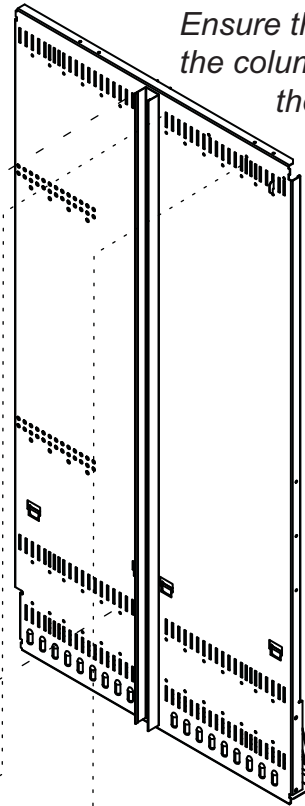

Front column filler

When properly installed, one tab at the top of the front column filler will be in the first slot counting from the center channel. The other tab will be in position 8, counting from the front of the column.

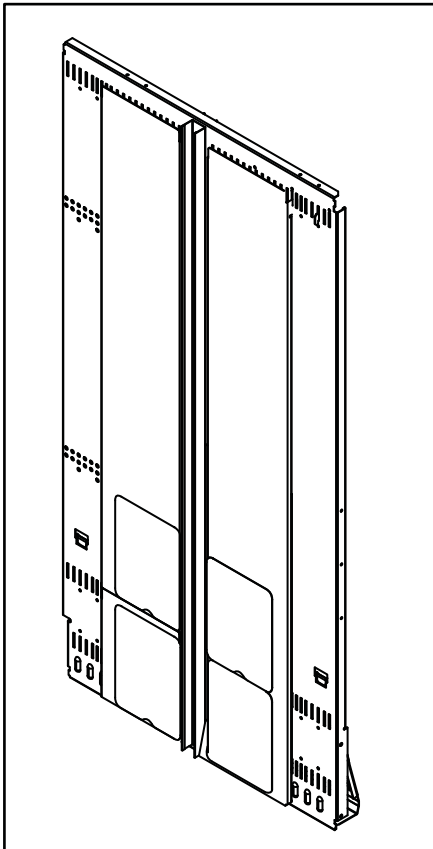


**ANY QUESTIONS? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
IN NORTH AMERICA, CALL TOLL FREE 1 800 931 9214**



159 Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776 • USA
Telephone: +1 304 728 7056 • technicalinquiry@royalvendors.com
Toll-free in North America: 1 800 931 9214 • Fax: +1 304 725 4016
Canada: +1 905 738 5777 • Mexico: +52 55 5203 6887
Europe: +49 2158 95 1000 • Australia: +61 2 9890 5433

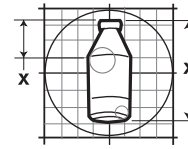

PRODUCT NAME: Chaudfontaine (2009)

Figure 2.

Installation of the center channel divider extrusions


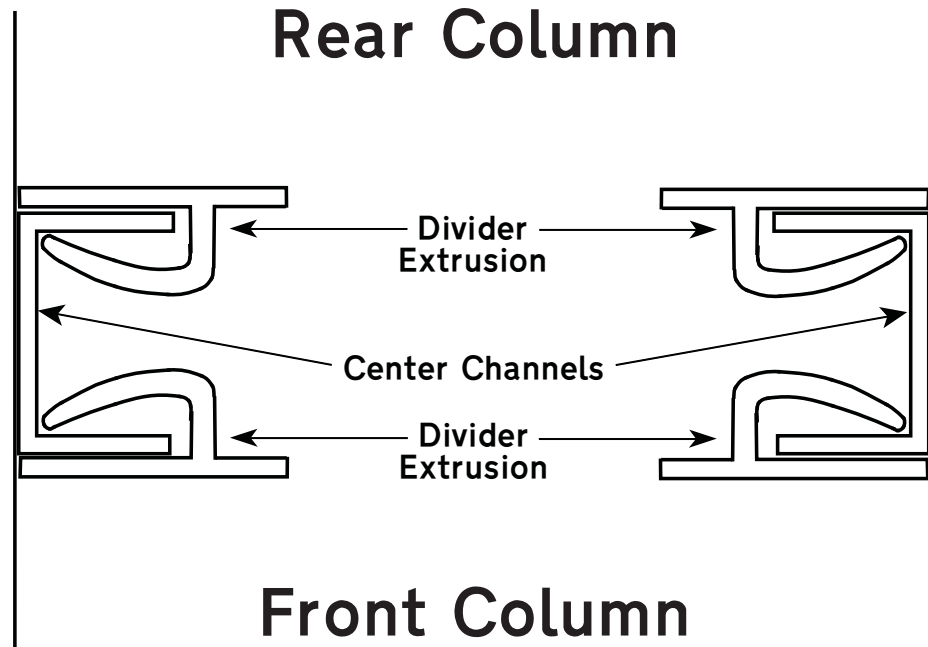


Figure 3.

Installation of the retainer extrusions




**ANY QUESTIONS? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT
IN NORTH AMERICA, CALL TOLL FREE 1 800 931 9214**

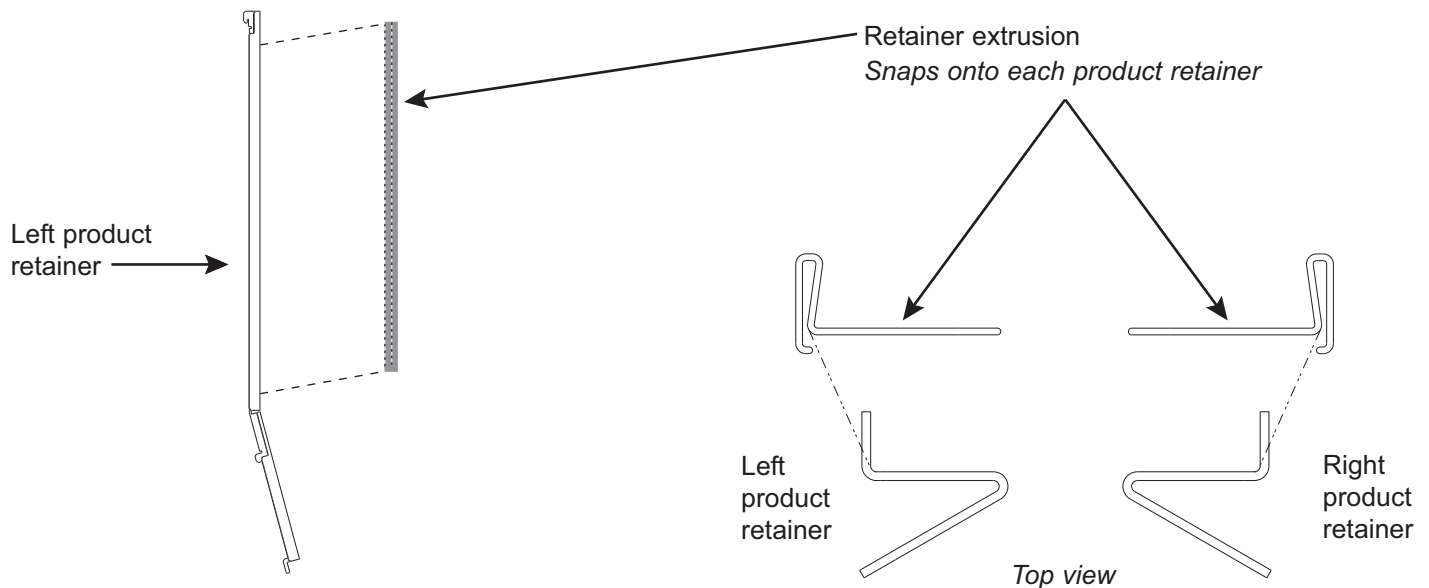

159 Package Vending Specification

426 Industrial Boulevard • Kearneysville WV 25430-2776 • USA
Telephone: +1 304 728 7056 • technicalinquiry@royalvendors.com
Toll-free in North America: 1 800 931 9214 • Fax: +1 304 725 4016
Canada: +1 905 738 5777 • Mexico: +52 55 5203 6887
Europe: +49 2158 95 1000 • Australia: +61 2 9890 5433

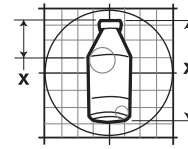


Page: 4 of 4
Date: 8 May 09
Revision: 00

PRODUCT NAME: Chaudfontaine (2009)

Figure 4.

Installation of the clip-on product stops

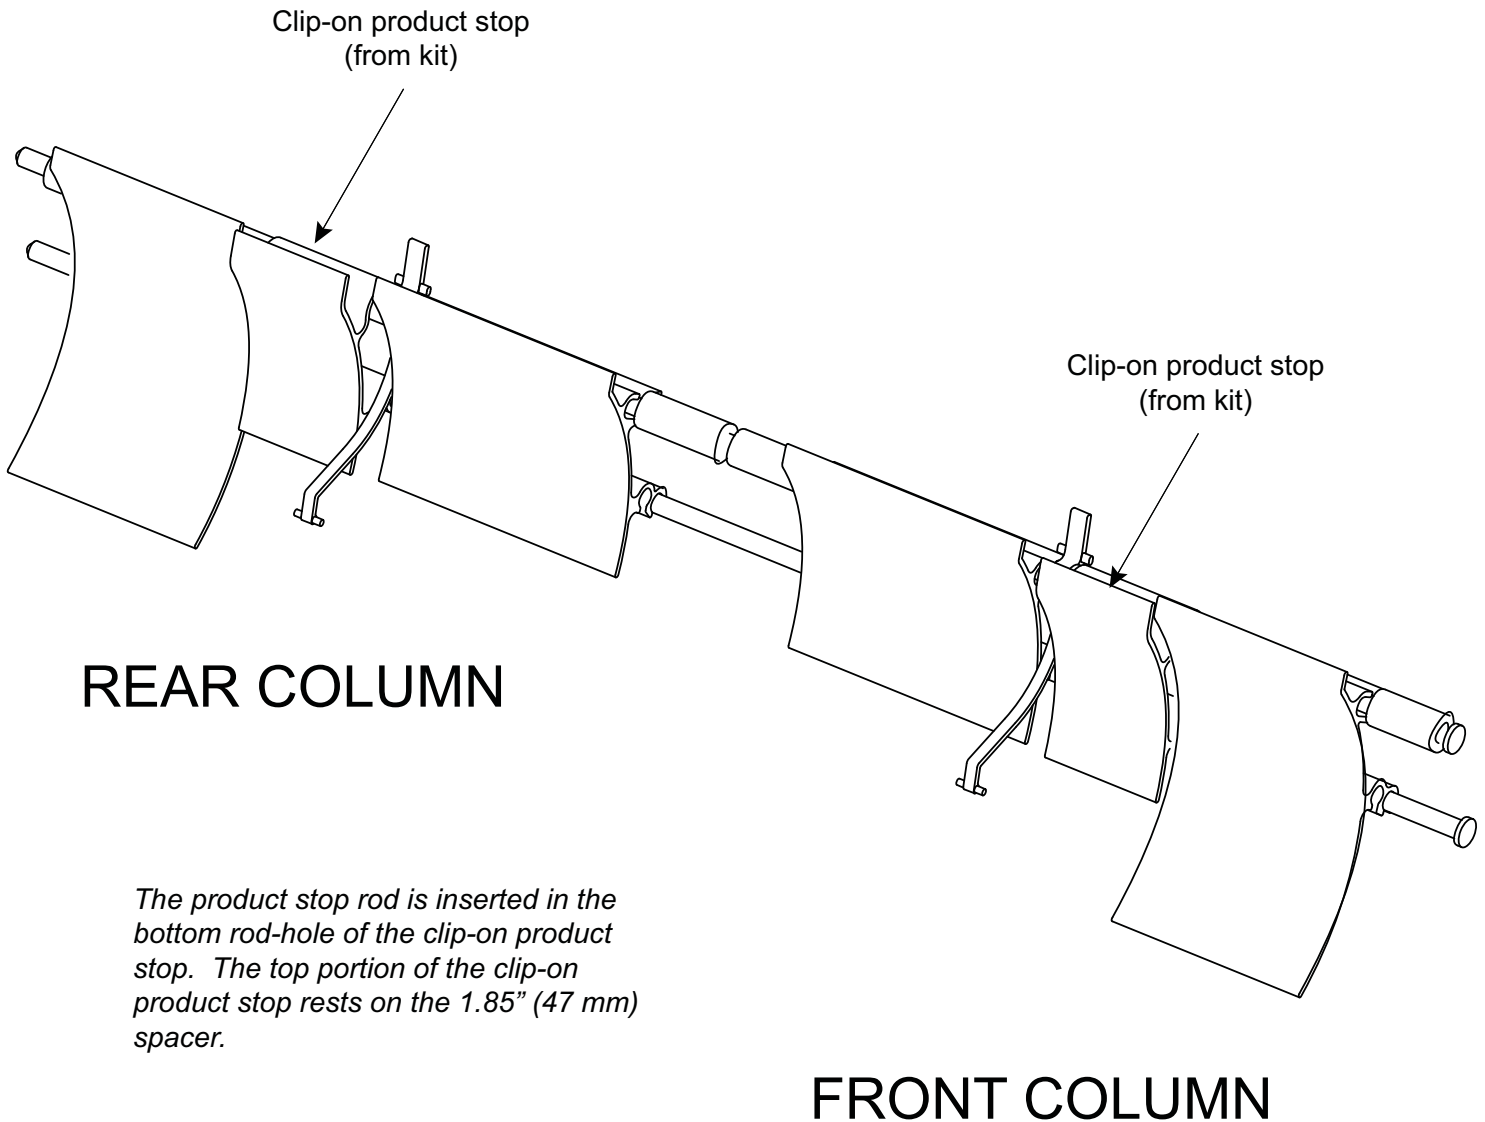

The product stop rod is inserted in the bottom rod-hole of the clip-on product stop. The top portion of the clip-on product stop rests on the 1.85" (47 mm) spacer.

ANY QUESTIONS? CONTACT ROYAL VENDORS' CUSTOMER SERVICE DEPARTMENT IN NORTH AMERICA, CALL TOLL FREE 1 800 931 9214